

H₂O DRY



Specially Formulated To Dry Waste Waterborne Paint



Check out our
Brief
Training Videos at
www.beccainc.com

Works great with
Waterborne Basecoat
Paints including:

- DuPont®**
- PPG®**
- Sherwin Williams®**
- BASF®**
- AKZO Nobel®**
- Valspar®**
- & Others**



- **Dries Waterborne Waste Paint in an Hour**
- **Simple 3-Step Process w/ Easy to follow instructions**
- **Disposable Container**
- **Non-Hazardous** (Should be tested w/ documentation on file)
- **Two 8 oz Bottles Per 2.5 Gal of Waste Paint**



Step One

Add 2 Containers of H₂O Dry to
2.5 Gallons of Paint Waste



Step Two

Stir Vigorously for several minutes
to completely mix in H₂O Dry




Step Three

After One Hour it will Gel.....
Additional time will allow waste
to dry further

Available:

- **Full Kit** - Includes (1) Container, (3) Liners, (6) Bottles of H₂O Dry, (3) Stirring Sticks **CD-50 \$79.00 ++**
- **Replenish Kit** - Includes (3) Liners, (6) Bottles of H₂O Dry, (3) Stirring Sticks **836001K \$69.00 ++**
- **Replacement Powder Kit** - Includes (6) Bottles of H₂O Dry **836002-6 \$49.00 ++**
- **25 Lbs Bulk Container** - Includes 25 Lbs of H₂O Dry & Scoop **836025 \$200.00 ++**

++ Plus Tax, Shipping & Handling, Pricing Subject to Change

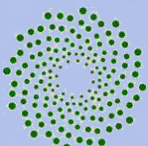

BECCA®

2010 Cobb International Blvd NW, Kennesaw, GA 30152
TEL: 800-655-5649 FAX: 800-655-5684