

# Proprietary Clarifier System


Clarifier Kit (825301K) is Compatible & Works w/ all BECCA H<sub>2</sub>O Spray Gun Cleaners

Remove  
Container



Add FLOCCER  
Packets or scoop

3-4 Packets or  
1 scoop Per  
Week of Use

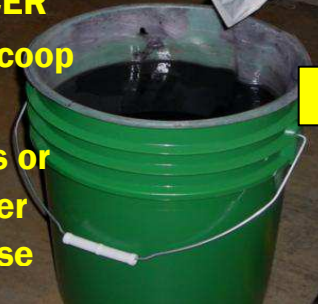

Insert  
"Air Bubbler"  
(Minimum 30 Min)



See  
Separated  
Solids / Fluid

Clear Edges - Filter  
Grey Edges - +1 Packet  
Black Edges - +2 Packets  
Reuse "Air Bubbler"



Filtering  
Solids / Fluid



Filtered  
Solids for  
Disposal



Clean Fluid  
for Re-Use

