

S700M

Manual

Solvent Spray Gun Cleaning Workstation



Check out our
Brief
Training Videos at
www.beccainc.com



BECCA[®]



- **POWERCLEAN** •
PROTECTS AIR PASSAGEWAYS
- **OVERSIZED STAINLESS WORK AREA** •
LARGE ERGONOMIC WORK SPACE
- **PULSATING FLUID POWER CLEANING** •
FLUSHES AWAY CONTAMINATION

S700M

Manual

Solvent Spray Gun Cleaning Workstation

The BECCA S700M Manual Spray Gun Cleaner Workstation is designed to meet the challenges of getting solvent spray guns clean quickly....

- Cleans all of the fluid passageways
- Protects air passageways to prevent contamination and corrosion



STANDARD UNIT FEATURES:

- STAINLESS STEEL GRILLED WORK AREA - Spacious and Painter Friendly
- POWERPISTOL™ - Quick & Powerful Spray Gun Cleaning
- POWERCLEAN™ - Compressed Air Connection Protecting Air Passageways
- PULSATING FLUID - Powerful Cleaning Efficiency
- USED/CLEAN FLUID CONTROL - Superior Cleaning and 50% Solvent Savings
- FLOW BRUSH - Improved Cleaning of dried material
- HIGH FLOW QD'S - High Flow Corrosion Resistant
- RED POWDER COATED FINISH - Long Maintenance Life
- INPUT AIR FILTER/REGULATOR - Proper System Air Control
- NESHAP COMPLIANT - Meets NESHAP Requirements

OPTIONAL UPGRADES:

- SOLVENTWASH™ CARTRIDGE FILTRATION - Less Maintenance & Improve Productivity with a Two Stage Filtration System (75 & 25 Micron Filters)
- FLUID RESERVOIR - 5 Gallon Steel Cans to hold Clean and Used Fluid
- COVER DOOR - Required in some Jurisdictions

Product Specifications:

Dimensions:

Overall:

57"H x 26"W x 26"D

1447 mm x 660 mm x 660 mm

Working: (Stainless Steel Working Area)

16"H x 25"W x 22"D

406 mm x 635 mm x 559 mm

Weight: 250 lbs (114 kg)


Shipping: Via Freight



POWERPISTOL™ - Pulsating Fluid... Powerful Cleaning for the Fluid Passageways



STAINLESS WORKSTATION A Spacious Work Area for Easy Use

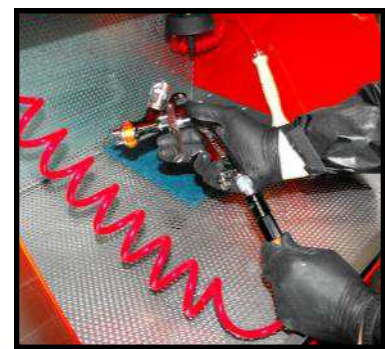

POWERCLEAN™ Supply's Compressed Air to the Spray Gun During the Cleaning Process, Protecting the Air Passageways



BECCA®

2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
 Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com