

# S300A

## Automatic/Manual Solvent Spray Gun Cleaner



Check out our  
Brief  
Training Videos at  
[www.beccainc.com](http://www.beccainc.com)



**BECCA**<sup>®</sup>



- **POWERCLEAN** •  
PROTECTS AIR PASSAGEWAYS
- **AUTOMATIC WASH BASIN** •  
HANDS-FREE OPERATION
- **PULSATING FLUID POWER CLEANING** •  
FLUSHES AWAY CONTAMINATION

# S300A

## Automatic/Manual Solvent Spray Gun Cleaner

The BECCA S300A Automatic Spray Gun Cleaner is designed to meet the challenges of getting solvent spray guns clean quickly....

- Cleans all of the fluid passageways
- Protects air passageways to prevent contamination and corrosion

### STANDARD UNIT FEATURES:

- STAINLESS STEEL BASIN w/ COVER - Compact Work Area
- AUTOMATIC HANDS-FREE CYCLE - Free up operator time
- POWERPISTOL™ - Quick & Powerful Spray Gun Cleaning
- POWERCLEAN™ - Compressed Air Connection Protecting Air Passageways
- PULSATING FLUID - Powerful Cleaning Efficiency
- USED/CLEAN FLUID CONTROL - Superior Cleaning and 50% Solvent Savings
- FLOW BRUSH - Improved Cleaning of dried material
- HI FLOW QD's - High Flow Solvent Resistant
- RED POWDER COATED FINISH - Long Maintenance Life
- INPUT AIR FILTER/REGULATOR - Proper System Air Control
- NESHAP COMPLIANT - Meets NESHAP Requirements

### OPTIONAL UPGRADES:

- EXHAUST KIT - Venturi Stack & Controls to initiate exhaust. Controls only allow exhaust to run when the lid is open and shut off the exhaust during cleaning .
- SOLVENTWASH™ CARTRIDGE FILTRATION— Includes a two stage filtration system (75 & 25 Micron Filters)
- FLUID RESERVOIR - 5 Gallon Steel Can or 10 Gallon Stainless Steel Tank to hold Clean and/or Used Solvent Supply
- DUAL POWERCLEAN KIT - Second Spray Gun Connection in the Wash Basin



#### Product Specifications:

Dimensions:

Overall:

42.5"H x 15"W x 26"L  
1080 mm x 381 mm x 660 mm

Working: (Stainless Basin)


14"D x 20"L x 12"W  
356 mm x 508mm x 305 mm

Weight: 170 lbs (77 kg)

Shipping: Via Freight



**POWERPISTOL™ - Pulsating Fluid...** Powerful Cleaning for the Fluid Passageways

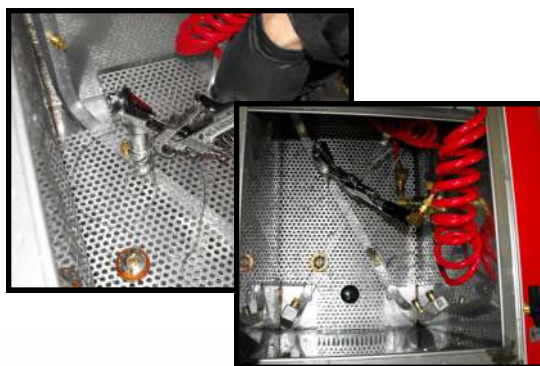

**STAINLESS STEEL AUTOMATIC WASH BASIN .....** Maximize Operator Productivity



**POWERCLEAN™ ....** Supply's Compressed Air to the Spray Gun During the Cleaning Process, Protecting the Air Passageways



**BECCA®**

2010 Cobb International Blvd, Suite H Kennesaw, GA 30152  
Phone 800.655.5649 Fax 800.655.5684 Internet: [www.beccainc.com](http://www.beccainc.com)