


# \$50M

## Manual Flex Solvent Spray Gun Cleaner

Check out our  
Brief  
Training Videos at  
[www.beccainc.com](http://www.beccainc.com)

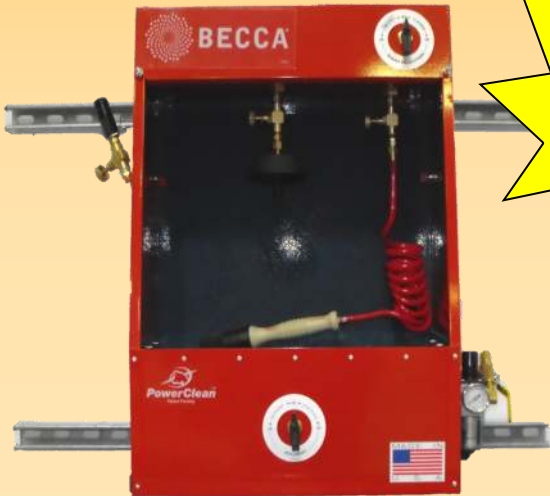

Shown with Optional Wall Mount Kit



Can be Table Top or Cart Mounted



Shown with Optional  
Mounting Stand  
with Legs Kit and  
Optional Solvent Cans

• **POWERCLEAN** •  
PROTECTS AIR PASSAGEWAYS

• **COMPACT DESIGN** •  
TIGHT SPACE APPLICATIONS

• **PULSATING FLUID POWER CLEANING** •  
FLUSHES AWAY CONTAMINATION



**BECCA**<sup>®</sup>



# S50M

## Manual Flex Solvent Spray Gun Cleaner

The New BECCA S50M Manual Flex Spray Gun Cleaner is designed to meet the challenges of getting solvent spray guns clean quickly....

- Cleans all of the fluid passageways
- Protects air passageways to prevent contamination and corrosion

### STANDARD UNIT FEATURES:

- STAINLESS STEEL BASIN - Compact Design, ideal for Tight Space Applications
- POWERPISTOL™ - Quick & Powerful Spray Gun Cleaning
- POWERCLEAN™ - Compressed Air Connection Protecting Air Passageways
- PULSATING FLUID - Powerful Cleaning Efficiency
- USED/CLEAN FLUID CONTROL - Superior Cleaning and 50% Solvent Savings
- SPLASH PAD - In Basin to Reduce Splash
- FLOW BRUSH - Stiff Nylon Bristles for Powerful Cleaning
- FOOT PEDAL - Pump Control for Hands Free Operation
- HIGH FLOW QD'S - High Flow Solvent Resistant
- RED POWDER COATED FINISH - Long Maintenance Life
- AIR FILTER/REGULATOR - Proper System Air Control



Shown with Optional Mounting Stand with Legs Kit and Solvent Cans

### OPTIONAL UPGRADES:

- SOLVENTWASH™ CARTRIDGE FILTRATION w/ 75 Micron Filter
- MOUNTING STAND with LEGS – Creates a free-standing system
- WALL MOUNT KIT—Includes uni-strut and hardware for mounting to single-skin wall. Additional hardware may be required.

### Product Specifications:

Dimensions:

Overall:

24”H x 18”W x 12”L

610 mm x 457 mm x 305 mm

Working: (Stainless Basin)

12”D x 16.75”W x 14”H

305 mm x 426mm x 356 mm

Weight: 45 lbs (21 kg)

Shipping: Freight



**POWERPISTOL™ - Pulsating Fluid...**  
Powerful Cleaning for the Fluid Passageways



**FLOW BRUSH** ..... Stiff Nylon Bristles for Powerful Cleaning



**POWERCLEAN™** .... Supply's Compressed Air to the Spray Gun During the Cleaning Process, Protecting the Air Passageways

