

# SOLVENT

## Options & Accessories For Solvent Spray Gun Cleaners



### SOLVENTWASH™ Filtration Recycler System

The filtration system cleans the solvent of particulate down to 25 micron (some models 75 micron) when utilizing the 'Clean' solvent (Rinse) function.



#### Models S40M, S50M, S100M, S700M, S10A, S20A, S700M, & S800A

BECCA has developed a new solvent recycler using an add-on filtration system for its entire line of spray gun cleaners. The system can handle traditional solvents as well as EPA approved alternative solvents. The SOLVENTWASH filtration package can be ordered with your unit or retrofitted at a future date. This provides you the comfort to know that your BECCA Spray Gun Cleaner is always ready to serve you now and in the future.

### 5 Gallon Cans or 10 Gallon Tanks

#### Models S40M, S50M, S100M, S10A, S20A, S300A, S700M & S800A

The **5 gal Cans** are standard solvent containers and come equipped with a



#### Models S700M & S800A (S300A w/ filtration)

The **10 gal Tanks** are designed for the most demanding operations. Performance features:

- Stainless Steel Construction
- Sight Glass
- Direct Connection



### Workstation Door Cover



#### Models S700M & S800A

The Workstation Door Cover is available for those applications that require total closure of the system when it is not in operation. This usually applies in California & Pennsylvania



**BECCA®**


2010 Cobb International Blvd, Suite H Kennesaw, GA 30152  
Phone 800.655.5649 Fax 800.655.5684 Internet: [www.beccainc.com](http://www.beccainc.com)

# SOLVENT

## Options & Accessories For Solvent Spray Gun Cleaners




### **Turbo** Pressure Pot & Fluid Line Cleaner System

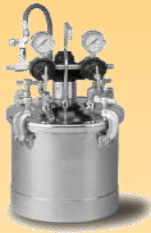

**Models S100M, S700M, S10A, S20A, S300A, & S800A**

The Pressure Pot Cleaner System was designed to handle the cleaning of the pressurized pot & fluid lines typically found in large or high production operations.

TURBO is a unique system that provides a Pre-Clean & Rinse capability through the fluid line, while turbulent compressed air is added providing the Turbo cleaning effect. The compressed air then can dry the lines.

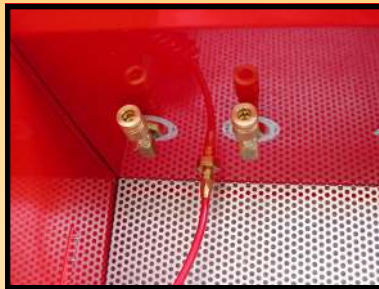

**S800A w/ TURBO**

Pressure Pot & Fluid Lines can be easily connected to the Turbo System utilizing your operations standard Fluid Quick Disconnects (not supplied)



**S300A w/ TURBO**



### Carbon Absorption Exhaust System

**Models S10A, S20A, S300A, S700M, & S800A**

Some installations cannot accommodate exhaust duct and/or allow VOC's into the environment. BECCA has developed a Carbon Absorption system for each of the BECCA NEXT Spray Gun Cleaners. The active carbon exhaust canister mounts on top of the exhaust outlet and is easily removed for replacement. Replacement is determined by odors emitting from the unit and/or a monitor placed in the area.



### BECCA Protect™ Film

**Models S40M, S50M, S100M, S10A, S20A, S300A, S700M & S800A Models**

To keep your investment looking good through it's life, we offer BECCA Protect™ Film.



Before Removal

New Application of BECCA Protect™



**BECCA®**

2010 Cobb International Blvd, Suite H Kennesaw, GA 30152  
Phone 800.655.5649 Fax 800.655.5684 Internet: [www.beccainc.com](http://www.beccainc.com)