

SOLVENTWASH™



Filtration Recycling System

For Solvent Spray Gun Cleaners

*The
Professionals
Choice*

Filtration Recycling Benefits

- **BECCA Filtration Recycling** is ideal for Waterborne shops, where traditional Solvent Distillation Recycling can no longer be justified because only clearcoat and primer spray guns are being cleaned with solvent.
- **A Fraction of the Cost** of Distillation Recyclers
- **BECCA Filtration Recycling System** is compatible with conventional solvents and alternative clean-up solvents.
- **Easy Replacement of Cartridges**
- **Simple Use** - "Used" Solvent for Pre-Cleaning & Filtered Solvent for the Final Rinse
- **BECCA Care™** - Local sales, installation, training and service



S100M



S300A shown with Optional 5 Gal Container



S800A Shown w/ Optional TURBO Pressure Pot & Fluid Line Cleaner, 10 Gal Tank & Cover Door



S10A shown with Optional 5 Gal Container



BECCA®

2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com

BECCA SOLVENTWASH™ Filtration Recycling System


What is It?: This Proprietary Filtration Recycling process extends the life of the solvent for re-use. After a period of time re-used the solvent is purged and the filters replaced. This filtered solvent can last from 1-6 months, depending on the operators willingness to discard the paint remaining in the gun and perform a pre-rinse prior to using the spray gun cleaner. There are two configurations depending on the model of the Spray Gun Cleaner:

- 1) Dual Stage Filtration including a First Stage equipped with a 75 Micron Filtration Cartridge and a Second Stage equipped with a 25 Micron Filtration Cartridge.
- 2) Single Stage Filtration equipped with a 75 Micron Filtration Cartridge (2nd Stage Filtration can be requested at a later date)

Select When: You want to reduce the solvent waste generated and quit having it hauled away! Filtration Recycling can reduce this by up to 80%

How Does it Work?:

The underside of the spray gun cleaner will have one container of Solvent Cleaning Solution. Both lines are placed in the container allowing “Used” solvent to go directly for Pre-Cleaning and the other line goes through the SOLVENTWASH™ Filtration System to provide “Filtered” solvent for Rinsing.

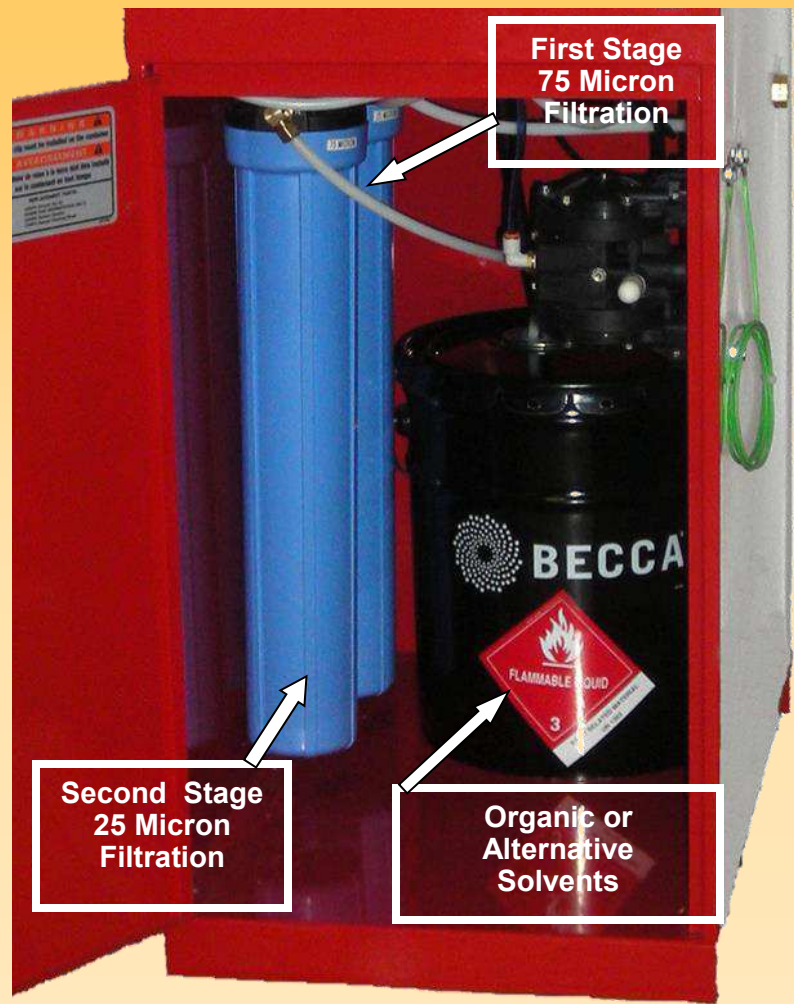

Single Stage
Cartridge System

BECCA SINGLE STAGE CARTRIDGE FILTRATION

Single Stage Filter System including 75 Micron Filter Module to help provide a more productive system.



Dual Stage
Cartridge System

BECCA DUAL STAGE CARTRIDGE FILTRATION

Dual Stage Filter System including a 75 Micron and a 25 Micron Filter providing the best overall paint residue control.



BECCA®

2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com